

ANTUNES BEST BURGER TOASTER GUIDE

TOP TIPS:

- Make sure to calibrate your toaster regularly with the buns provided by your bakery.
- Clean & Teflon belts daily.
- Inspect belts daily for any tears, discoloration, or damage to belt snaps. Replace as needed or every 90 days.
- Inspect bun feeder to ensure it is not bent or rubbing against belts.
- Clean fan every 90 days.

COMPRESSION SETTING

If bun height is not to spec - Adjust compression as needed

Use the compression knob on the left side of the unit to adjust

- **Default Setting: 4**
- Compression Adjustment: 1-7 (1 is the most compression)



Horizontal Contact Toaster (HCT)

Use the QR code below to access the Owner's Manual for further instructions.



RECOMMENDED SETTINGS

Platen A & B Temperature: 540°F Platen C Temperature: 490°F Toast Time: 22 seconds

If you are not experiencing Gold Standard Toast Quality, please check to ensure the toaster settings are set to the factory recommended settings provided above.

TEMPERATURE VERIFICATION

Verify temperature settings match the default settings provided above. Please complete the verification by accessing the settings through the Menu button.

- 1. When the unit is plugged in, press, and hold the MENU button for five seconds. The Control panel will display "Platen A".
- 2. Use the RIGHT and LEFT scroll buttons to navigate through the settings.
- 3. Use the right arrow to scroll through the settings, which appear in the following order:
 - Platen A
 - Platen B
 - Platen C
- 4. If temperature settings do not match the recommend setting above - Please use the QR code below to access the manual and complete a factory reset.

TROUBLESHOOTING

Buns not feeding properly into toaster – clean bun feeder with sanitized towel.

Buns sticking during toasting - Thoroughly clean bun feeder, and Teflon belt. Focus on thoroughly cleaning the top belt to remove any residue.

Contact our Technical Service Department

877.392.7854

Tech.Service@antunes.com