




BEST BURGER SETTINGS

HEBT-3V

Serving the perfect burger to customers depends not only on the temperature of the bun but also on how well the bun retains heat. The HEBT provides such a deep quality toast that the bun temperature continues to increase up to 75 seconds after it's been toasted, ensuring the bun is still hot when it's in the hands of the customer.

Make the most of your High Efficiency Toaster and ensure you are delivering the Best Burger by following these easy settings adjustments:

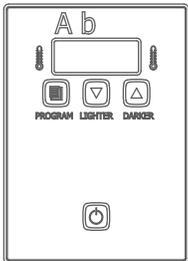

ENTER MANAGER MODE

1. Turn the unit off.
2. Turn the power on while holding the **PROGRAM** button. Hold the button for 5 seconds until the display shows "EnA". Release the button.

TEMPERATURE ADJUSTMENTS

1. To adjust the Platen A (front) Setpoint Temperature, press the **LIGHTER** or **DARKER** buttons to reach the desired temperature.
2. Press the **PROGRAM** button to proceed to the Platen B (rear) Setpoint Temperature.
3. To adjust the Platen B (rear) Setpoint Temperature, press the **LIGHTER** or **DARKER** buttons to reach the desired temperature.

CHANGE CELSIUS / FAHRENHEIT

1. Press the **PROGRAM** button to proceed to the Temperature Units.
2. To change the Temperatures units from Fahrenheit or Celsius, press the **LIGHTER** or **DARKER** buttons.

COMPRESSION ADJUSTMENT

Use the compression knob on the left side of the unit to adjust.

Default Setting: 4

Compression Adjustments: 1-7 (1 is the most compression)

LIGHT/DARK ADJUSTMENTS

Use arrow buttons to adjust between light and dark setting, from Light 0 to Dark 10. Darker settings increase passthrough time.

TOASTER SETTINGS

Front and Back Platen Temperature: 520°F / 271°C

Club Platen Temperature: 490°F / 254°C

Toast Time: 22 seconds

To adjust temperature setting from Celsius to Fahrenheit - Refer to Owner's Manual to switch between Celsius & Fahrenheit display.

