

Place this manual in the Small Equipment/
Miscellaneous section of your Equipment Manual.

**Manufactured exclusively for
McDONALD'S[®]**


**BY
ANTUNES
180 KEHOE BLVD.
CAROL STREAM, ILLINOIS 60188, U.S.A.
PHONE: +1-630-784-1000
TOLL FREE: +1-877-392-7854
FAX: +1-630-784-1650
www.antunes.com**



MES-1200

Scan with mobile device or enter URL
for product and service information.

<http://tiny.cc/ajaMES1200>

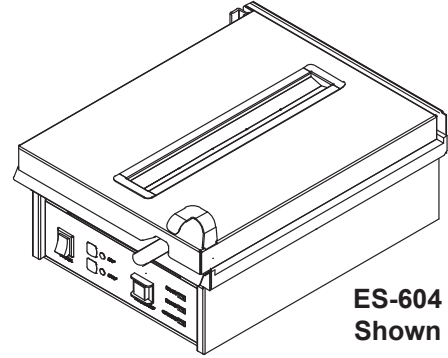

**ES-604
Shown**



Intertek




Intertek

TABLE OF CONTENTS

Owner Information	2	Operation	7
General.....	2	Preparing Unit.....	7
Warranty Information.....	2	Egg Cooking Procedure	8
Service/Technical Assistance	2	Bacon Timer	9
Important Safety Information	3	Best Practices	10
Specifications	5	Troubleshooting for Under Cooked Eggs.....	10
Electrical Ratings.....	5	Troubleshooting Eggs leaking out of Egg Rings	10
Dimensions.....	5	Maintenance	11
Electrical Cord & Plug Configurations	5	Daily Cleaning	11
Installation	6	Checking Grill Surface Temperature	11
Unpacking.....	6	Troubleshooting	12
Leveling the Unit.....	6	Wiring Diagram	13
		Replacement Parts	14
		LIMITED WARRANTY	16

⚠ IMPORTANT ⚠

The unit must be level before use. Before using the unit, adjust the legs of the unit as needed and use a level (if available) to ensure the unit is level. If a level is not available, pour a small amount of water directly onto the center of the cool grill surface. If the unit is level, the water should pool in the middle and not drain toward a certain section of the unit. Make adjustments as required. Turn legs clockwise to shorten or counter-clockwise to lengthen. See image (Side view of unit).

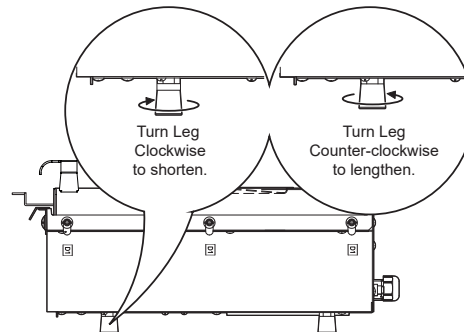

This manual is for the exclusive use of licensees and employees of McDonald's Systems, Inc.. © McDonald's Corporation All Rights Reserved. See back cover for important warranty information.

MANUAL EGG COOKER/STEAMER

OWNER INFORMATION

General

This manual provides the safety, installation, and operating procedures. We recommend that all information contained in this manual be read prior to installing and operating the unit.

This unit is manufactured from the finest materials available, assembled to our strict quality standards, and tested at the factory to ensure dependable trouble-free operation.

Warranty Information

Please read the full text of the Limited Warranty printed on the front cover of this manual.

If the unit arrives damaged, contact the carrier immediately and file a damage claim with them. Save all packing materials when filing a claim. Freight damage claims are the responsibility of the purchaser and NOT covered under warranty.

The warranty does NOT extend to:

- Damages caused in shipment or damage as result of improper use.
- Installation of electrical service.
- Installation, calibration, or adjustment.
- Normal maintenance outlined in this manual.
- Consumable parts such as Egg Rings, gaskets, rubber feet, labels, O-rings, light bulbs, etc.
- Malfunction resulting from improper service or maintenance.
- Damage caused by improper installation, abuse, or careless handling.
- Damage from moisture getting into electrical components.
- Damage from tampering with, removal of, or changing any preset control or safety device.
- Damage caused by parts or components not provided by Antunes.

Service/Technical Assistance

If you experience any problems with the installation or operation of your unit, contact Antunes Technical Service at **+1-877-392-7854 (toll free)**.

Fill in the information below and have it handy when calling Antunes Technical Service for assistance. The serial number is on the specification plate located on the side of the unit.

Purchased From: _____

Date of Purchase: _____

Model No.: _____

Serial No.: _____

Mfg. No.: _____

Use only genuine Antunes replacement parts in this unit. Use of replacement parts other than those supplied by the manufacturer will void the warranty.

IMPORTANT! Keep these instructions for future reference. If the unit changes ownership, be sure this manual accompanies the equipment.

IMPORTANT SAFETY INFORMATION

In addition to the warnings and cautions in this manual, use the following guidelines for safe operation of the unit.

- Read all instructions before using equipment.
- Install or locate the equipment only for its intended use as described in this manual.
- Do NOT use corrosive chemicals in this equipment.
- Do NOT operate this equipment if it has a damaged cord or plug; if it is not working properly; or if it has been damaged or dropped.
- This equipment should be serviced by qualified personnel only. Contact Antunes Technical Service at +1-877-392-7854 (toll free).
- Do NOT block or cover any openings on the unit.
- Do NOT immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do NOT allow cord to hang over edge of table or counter.

The following warnings and cautions appear throughout this manual and should be carefully observed.

- Turn the power off, unplug the power cord, and allow the unit to cool down before performing any service or maintenance.
- The equipment should be grounded according to local electrical codes to prevent the possibility of electrical shock. This requires a grounded receptacle with separate electrical lines to be protected by fuse(s) or circuit breaker(s) of the proper rating.
- All electrical service connections must be in accordance with local and/or other applicable electrical codes.
- Do NOT clean this appliance with a water jet.
- Do NOT use a sanitizing solution or abrasive materials. The use of these may cause damage to the stainless steel finish.
- Chlorides or phosphates in cleaning agents (e.g. bleach, sanitizers, degreasers, or detergents) could cause permanent damage to stainless steel equipment. The damage is usually in the form of discoloration, dulling of metal surface finish, pits, voids, holes, or cracks. This damage is permanent and not covered by warranty.

IMPORTANT

Antunes reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions, or replacements for previously purchased equipment.

IMPORTANT SAFETY INFORMATION (continued)

The following tips are recommended for maintenance of your stainless steel equipment,

- Always use soft, damp cloth for cleaning, rinse with clear water and wipe dry. When required, always rub in direction of metal polish lines.
- Finger marks and smears should be rubbed off using soap and water.
- Hard water spots should be removed using a vinegar solution.

⚠ WARNING ⚠

ELECTRICAL SHOCK HAZARD.

FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL COULD RESULT IN SERIOUS INJURY OR DEATH.

- Electrical ground is required on this appliance.
- Do NOT modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- Do NOT use an extension cord with this appliance.
- The unit should be grounded according to local electrical codes to prevent the possibility of electrical shock. It requires a grounded receptacle with separate electrical lines, protected by fuses or circuit breaker of the proper rating.
- Check with a qualified electrician if you are unsure if the appliance is properly grounded.

⚠ CAUTION ⚠

All electrical connections must be in accordance with local electrical codes and any other applicable codes.

SPECIFICATIONS

Electrical Ratings

Model & Mfg. No.	Volts	Watts	Amp	Hertz
MES-1200 9300600	208/220- 240	2400/ 3150	11.5/ 13.1	50/60
MES-1200 9300602				
MES-604 9300603				
MES-1200 9300618				




Shipping Weight

- MES-1200/MES-604: 50 lbs (22.6 kg)


Net Weight

- MES-1200/MES-604: 43 lbs (19.5 kg)

Electrical Cord & Plug Configurations

Model & Mfg. No.	Description	Configuration
MES-1200 9300602	Power Cord 20 Amp., Pin & Sleeve.	
MES-1200 9300600 MES-604 9300603	L6-20P, 20 Amp., 250 VAC., Straight Twist Lock.	
MES-1200 9300618	PSE, 20 Amp., 250VAC Twist Lock	

Dimensions

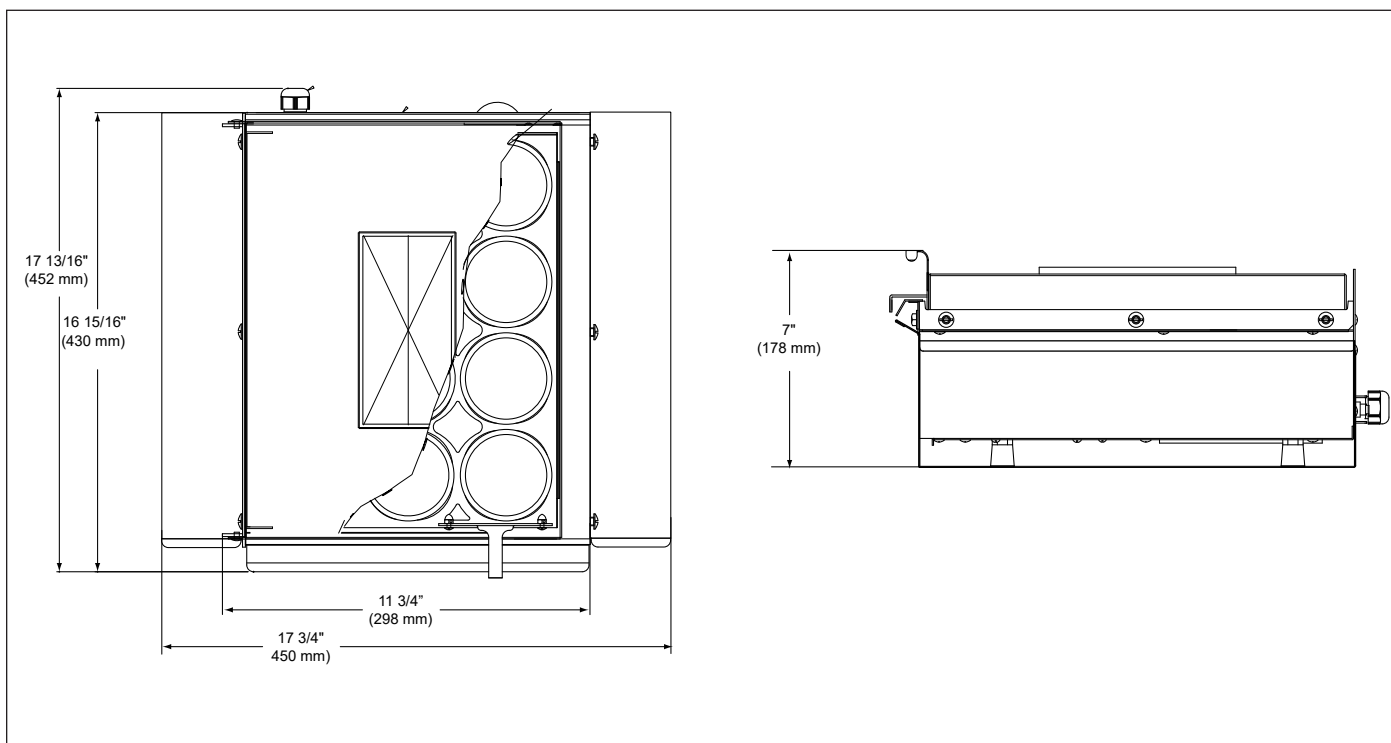

MANUAL EGG COOKER/STEAMER

INSTALLATION

Unpacking

1. Remove unit and all packing materials from shipping carton.

NOTE: If any parts are missing or damaged, contact Antunes Customer Service IMMEDIATELY at +1-877-392-7856 (toll free).

2. Remove information packet.
3. Remove all packing materials and protective coverings from the unit.
4. Wipe all surfaces of the unit with a hot damp cloth.


NOTE: Do NOT use a dripping wet cloth. Wring it out before use.

5. Clean the Egg Rings, Egg Rack, Top Cover, and Scrap Pans in hot, soapy water. Rinse in clear water and allow to air dry.
6. Reassemble all parts to unit.

Leveling the Unit

The unit must be placed on a level surface. The unit comes with 4 individually adjustable legs to assist in leveling. Be sure to place the unit on a sturdy flat surface and adjust the legs as needed to ensure the unit is level. Turn legs **clockwise to shorten** or **counter-clockwise to lengthen**.

To verify if the unit is level, use a level (if available). If a level is not available, open the Top Cover and Egg Rack and pour a small amount of water directly onto the cool grill surface. If the unit is level, the water should pool in the middle and not drain toward a certain section of the unit. Make adjustments as required.

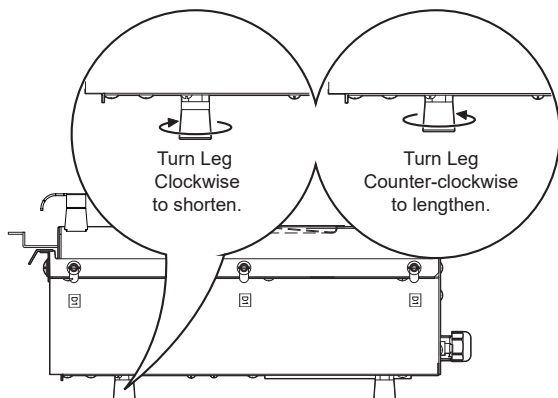

▲ IMPORTANT ▲

Failure to level the unit may result in unevenly cooked product.

Preparing Unit

1. Turn the power on.
2. Place Egg Rings into Egg Rack (Figure 1).
3. Vertically place the pins of the Egg Rack into the slots on the Hinge Bracket.
4. Check to see that all Egg Rings are seated flat on the Grill Surface.
5. Ensure that the Egg Rack and Top Cover are in the down position during warm-up and when not loading or removing eggs.
6. Slide the Scrap Pans into place on both sides of the unit.
7. Allow the unit to preheat for approximately 20-30 minutes.

NOTE: The Ready Indicator Light flashes while the unit warms up and stays on after the unit reaches operating temperature.

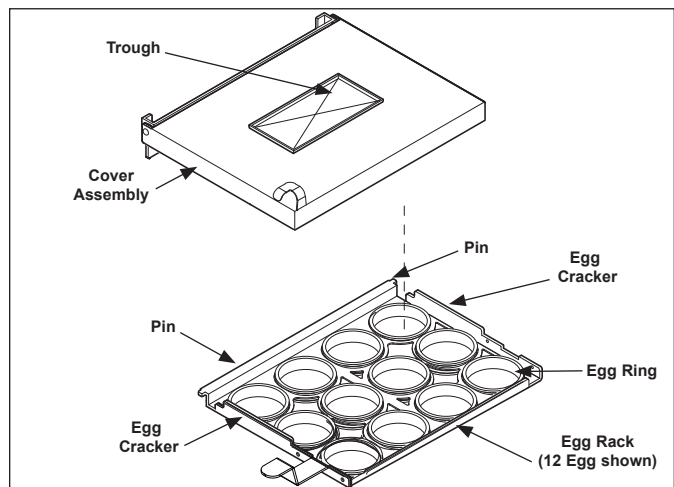


Figure 1. Cover Assembly & Rack Assembly

OPERATION (continued)

Egg Cooking Procedure

1. Ensure that the unit is set on a level surface.
2. Verify that the unit itself is level so that water does not run from one side to the other. Adjust the legs as needed to level the unit. Refer to the section titled "Leveling the Unit" for more information.
3. Make sure the grill is clean and free of all extra butter, oils, or egg product. Use a brush to clean egg rings.
4. Raise the Top Cover and spray the rack with clarified butter using **ONE spray applied in a sweeping motion** so all egg rings are covered with the one spray.

IMPORTANT!!!

Do NOT over-apply the clarified butter! Use only **ONE spray applied in a sweeping motion** for each section of the grill. Remember: **Less is Best!**

FOR BEST COOKING RESULTS, DO NOT OVERFILL THE WATER TROUGH. DO NOT OPEN THE TOP COVERS DURING COOKING

WIPE THE GRILL SURFACE 4 TIMES PER HOUR WITH A CLEAN, SANITIZER-SOAKED TOWEL.

REFER TO THE PM CARD FOR YOUR UNIT FOR CLEANING INSTRUCTIONS.

5. Crack the eggs into the Egg Rings from Front to Back, right to Left as shown in Figure 2.
6. Continue to crack the eggs, placing them in order, until all six Egg Rings (or 12 shown above) contain an egg.
7. Break the egg yolks with a Yolk Breaker.
8. Close the Top Cover.
9. Fill the trough on the Top Cover with no more than 3 ounces of warm water until it is **completely full**. This is very important to get a completely cooked egg with a jelled yolk. Using less water results in under cooked eggs.

NOTE: Make sure the trough holes are not plugged!

10. Press the **TIME 1** button for folded eggs or the **TIME 2** button for shelled eggs.
11. Press the **START/STOP** button to start the cooking cycle.

NOTE: When possible, eggs should be pulled from the cooler and not kept at the grill. Tempering eggs increases their temperature. Eggs kept past 30 minutes will result in a higher proportion of over-cooked eggs.

To ensure proper cooking, place eggs into rings in numerical order from 1 - 6 for MES-604 units or 1 - 12 for MES-1200 units as shown below.

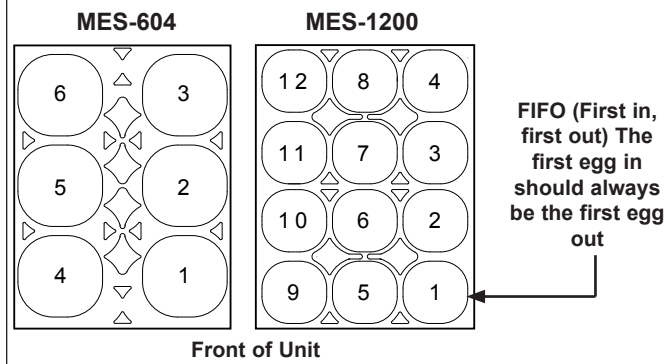


Figure 2. Egg Cooking Procedure

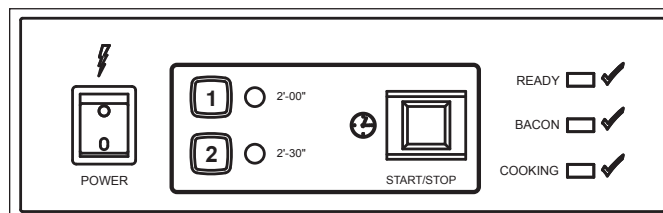


Figure 3. Operating Controls

MANUAL EGG COOKER/STEAMER

OPERATION (continued)

NOTE: The Cooking Indicator Light will light when the **START/STOP** button is pressed and released.

WARNING

Be sure to wear **HEAT-RESISTANT GLOVES** when removing the Egg Rack while the unit is on. Use extreme care to avoid personal injury.

12. When the Cooking Indicator Light turns off and the audio signal sounds, press the **START/STOP** button to turn off the audio signal.
13. Open the Top Cover and raise the Egg Rack about 1 inch (26 mm), then drop the rack to loosen the eggs.
14. Raise the Egg Rack completely off the eggs and remove the eggs starting with the **FIRST** egg added (Figure 2). Continue removing the eggs in the order they were added until all eggs have been removed.
15. Remove the waste into the Scrap Pans using a Plastic Scraper. To minimize oil buildup and optimize steaming performance, wipe the grill surface 4 times an hour with a clean, sanitizer-soaked towel.

NOTE: Do **NOT** scrape the grill surface with a metal scraper. This can cause damage to the grill surface.

16. Lower the Egg Rack and Top Cover. The unit is ready for further cooking.

Bacon Timer

NOTE: The Bacon Timer is disabled by default.


If the Bacon Timer is enabled, an audio signal will sound for a few seconds and the Bacon Indicator Light will begin to flash 30 seconds before the end of the cooking cycle. During this time, the product should be placed on the front part of the grill so that it will heat for 30 seconds. The Bacon Indicator Light will continue to flash until the end of the cooking cycle.

To disable the Bacon Timer, press the **TIME 1** and **TIME 2** buttons simultaneously for 3 or more seconds. The Bacon Indicator Light will turn off. The Bacon Timer is now disabled.

BEST PRACTICES

Troubleshooting for Under Cooked Eggs

1. Level unit - adjust feet if necessary. The unit must be level before use. Before using the unit, adjust the legs of the unit as needed and use a level. If a level is not available, pour a small amount of water directly onto the center of the cool grill surface. The water should pool in the middle and not drain toward a certain section of the unit. Make adjustments as required. Turn legs clockwise to shorten or counter-clockwise to lengthen. See image below (Side view of unit).

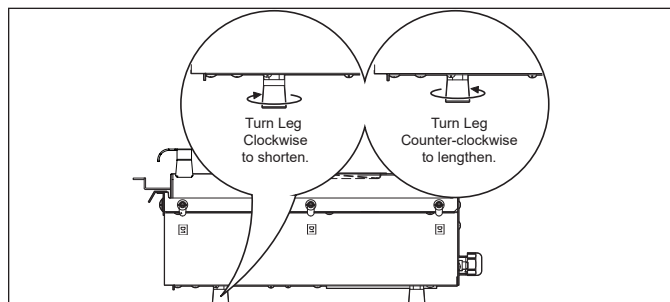

2. Be sure you are using the correct cycle to cook eggs.
 - 2:00 for folded eggs
 - 2:30 for shelled eggs
3. Do not use cold water in trough. Use room temperature water. Warm water is preferred.
4. Ensure trough is filled to the top and not over/under-filled.
5. Ensure Start button is pressed promptly after lid is closed and trough is filled.
6. Yolks must be broken with spatula.
7. Clean the grill surface after each cooking cycle.
8. Use the correct amount of butter/oil on grill surface.
9. Confirm ready light is solid green prior to starting another cooking cycle.
10. Check grill temperature according to the section titled Checking Grill Platen Temperature in the Maintenance section of this manual.
11. Regularly check the holes in the trough to ensure there are no clogs.

Troubleshooting Eggs leaking out of Egg Rings

Egg Ring Replacement depends on usage but in general, Egg Rings should be replaced yearly. If eggs begin to leak out of the Egg Rings:

1. Inspect the Egg Rings for damage regularly. Clean the unit and flip the Egg Rings 180° degrees or replace the Egg Rings if required.
2. Egg Rings should be installed in the Egg Rack so they can move up and down to ensure they are flush against the grill surface. If the Egg Rings do not move freely up and down within the Rack, remove the Egg Ring and reshape it to its normal form, and reinstall. Replace the Egg Ring if required.
3. The Egg Rings should sit flush against the grill surface and hold the egg inside the Egg Ring while cooking. Review the section titled Best Practices/Troubleshooting for Under Cooked Eggs in this manual. Inspect the Egg Rings for damage. Flip or replace as required.

MANUAL EGG COOKER/STEAMER

MAINTENANCE

⚠ WARNING ⚠

Turn the power off, unplug the power cord, and allow the unit to cool down before performing any service or maintenance.

Daily Cleaning

1. Turn the power switch off. Unplug the power cord. Allow the unit to cool until warm (minimum of 10 minutes). Put on Heat-Resistant Gloves.

NOTE: If the unit is hot, use Heat-Resistant Gloves.

2. Wearing Heat-Resistant Gloves, remove the Top Cover, Egg Rings, and Scrap Pans from the unit. Take them to the three compartment sink.
3. Wash, rinse, and sanitize the Top Cover, Egg Rings, and Scrap Pans. Allow to air dry. Reinstall parts when complete.
4. Spray a clean, sanitizer-soaked grill cloth with Kay QSR Super Contact Cleaner or Diversey Suma Extend D3. Wipe the entire grill surface until it is clean. Use a separate clean, sanitizer-soaked grill cloth to rinse the grill surface to remove all traces of Sink Detergent Solution. Discard the soiled grill cloths into the soiled towel bucket immediately after use.

NOTE: If a scraper is needed during cleaning, use a plastic scraper. DO NOT USE A METAL SCRAPER.

NOTE: Do NOT Pour water onto the grill surface when it is hot. This can cause damage to the grill.

NOTE: Do NOT use Heat Activated Grill Cleaner.

5. Wipe down the exterior of the unit with a separate clean, sanitizer-soaked towel sprayed with Kay QSR Super Contact Cleaner or Diversey Suma Extend D3. Use a separate clean, sanitizer-soaked grill cloth to rinse the exterior of the unit to remove all traces of solution. Discard the soiled towel into the soiled towel bucket immediately after use.
6. Plug in the power cord. Turn the power switch on. Return the unit to use.

Checking Grill Surface Temperature

NOTE: A pyrometer is required for this procedure.

⚠ WARNING ⚠


This procedure exposes you to hot surfaces. Use extreme care when performing procedure to avoid personal injury.

1. Remove the Top Cover and the Egg Rack by lifting the whole assembly until clear of the base.
2. Turn the unit on and allow 30 minutes for the unit to warm up.
3. Using a pyrometer, measure the temperature at the **middle** of the Grill Surface. The temperature should be 250°F– 300°F (121°C–149°C).

If temperature is within range, proceed to Step 4.

If temperature is above or below range, call Antunes Technical Service at +1-877-392-7854 toll free.

4. Turn the unit off.
5. Reinstall the Egg Rack and Top Cover.

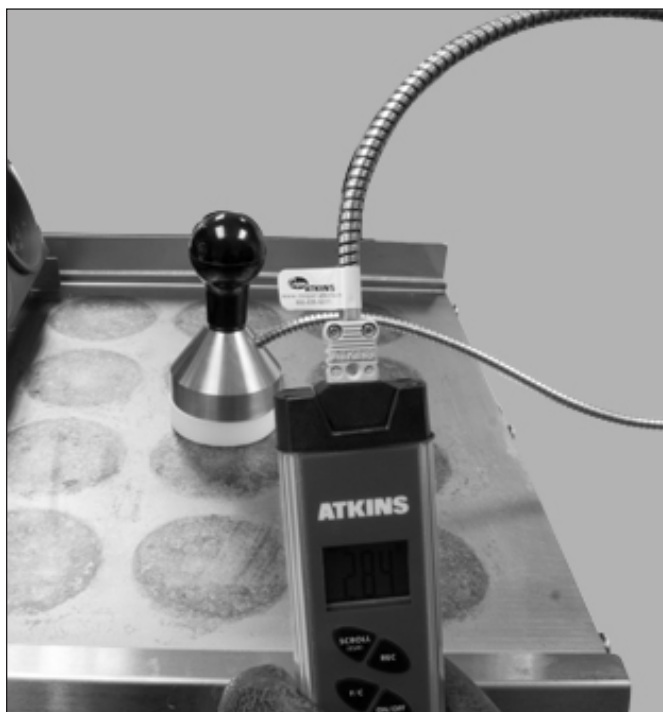

TROUBLESHOOTING

⚠ WARNING ⚠

To avoid possible personal injury and/or damage to the unit, inspection, test, and repair of electrical equipment should be performed by qualified service personnel. The unit should be unplugged when servicing.


Problem	Possible Cause	Corrective Action
Unit fails to operate and control panel lights fail to signal on.	No power/low power.	Make sure power is on and power cord is locked into place. Check main circuit breakers.
	Inoperable electrical outlet.	Plug into different outlet of same amperage rating.
	Inoperable Power Switch.	Contact your maintenance person or Antunes Technical Service.
	Inoperable Power Cord.	
	Loose connections.	
Unit fails to heat.	Loose connections.	Contact your maintenance person or Antunes Technical Service.
	Inoperable grill.	
	Low voltage.	
	Inoperable hi-limit thermostat.	
	Inoperable thermocouple.	
Eggs do not cook properly.	Using refrigerated eggs and TIME 1 button selected.	Use TIME 2 button when using shelled eggs.
	TIME 2 button selected (eggs over-cooked).	Use TIME 1 button when using folded eggs.
	Incorrect amount of water added to trough in cover.	Fill trough in cover with water before starting time cycle.
	Grill temperature too low or high.	Perform the steps in the section titled "Checking Grill Surface Temperature" in this manual. The temperature should be 250°F– 300°F (121°C–149°C). If not, contact Antunes Technical Support for assistance.
	Loose connections.	Contact your Antunes Technical Service.
	Unit/table is not level.	Level the table and unit as necessary.
Eggs sticking to Grill Surface.	Dirty Grill Surface.	Clean Grill Surface.
	Insufficient butter being used.	See the Operating Instructions section.
Eggs sticking to Egg Rings.	Insufficient butter being used.	See the Operating Instructions section.
	Dirty Egg Rings.	Do not use an abrasive scrubbing pad to clean Egg Rings.
	Inoperable Egg Ring.	Replace Egg Ring.
Not signaling on "Bacon" or "Ready".	Inoperable indicator light or audio signal.	Contact your maintenance person or Antunes Technical Service.
	Inoperable control board.	
	Loose connection.	
	Bacon Timer is disabled.	Enable Bacon Timer according to the Operating section of this manual.

If the troubleshooting steps listed do not solve your problem, contact Antunes Technical Service at +1-877-392-7854 toll free for further assistance.


MANUAL EGG COOKER/STEAMER

WIRING DIAGRAM

NOTE: ALL WIRES TO BE 14 GA. TFE-200°C
 UNLESS OTHERWISE SPECIFIED.
 # 18 GA. TFE-200°C
 • 22 GA. TFE-200°C

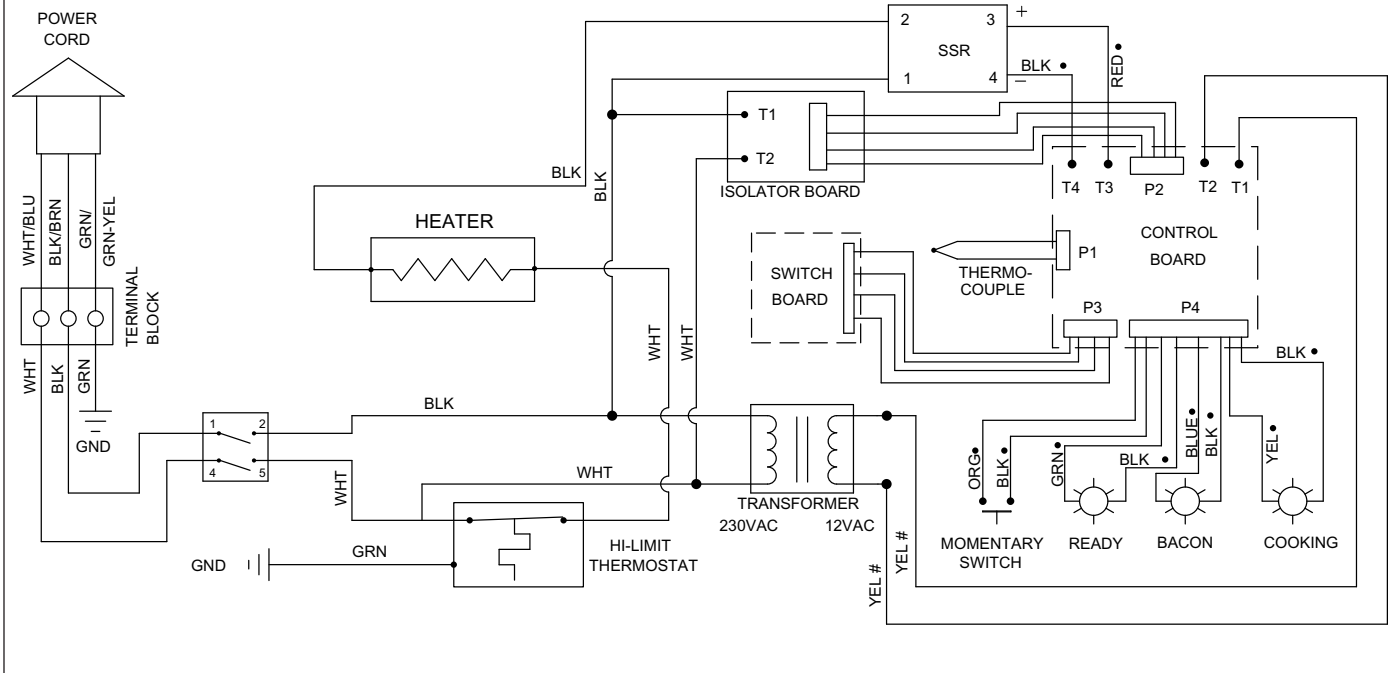

REPLACEMENT PARTS

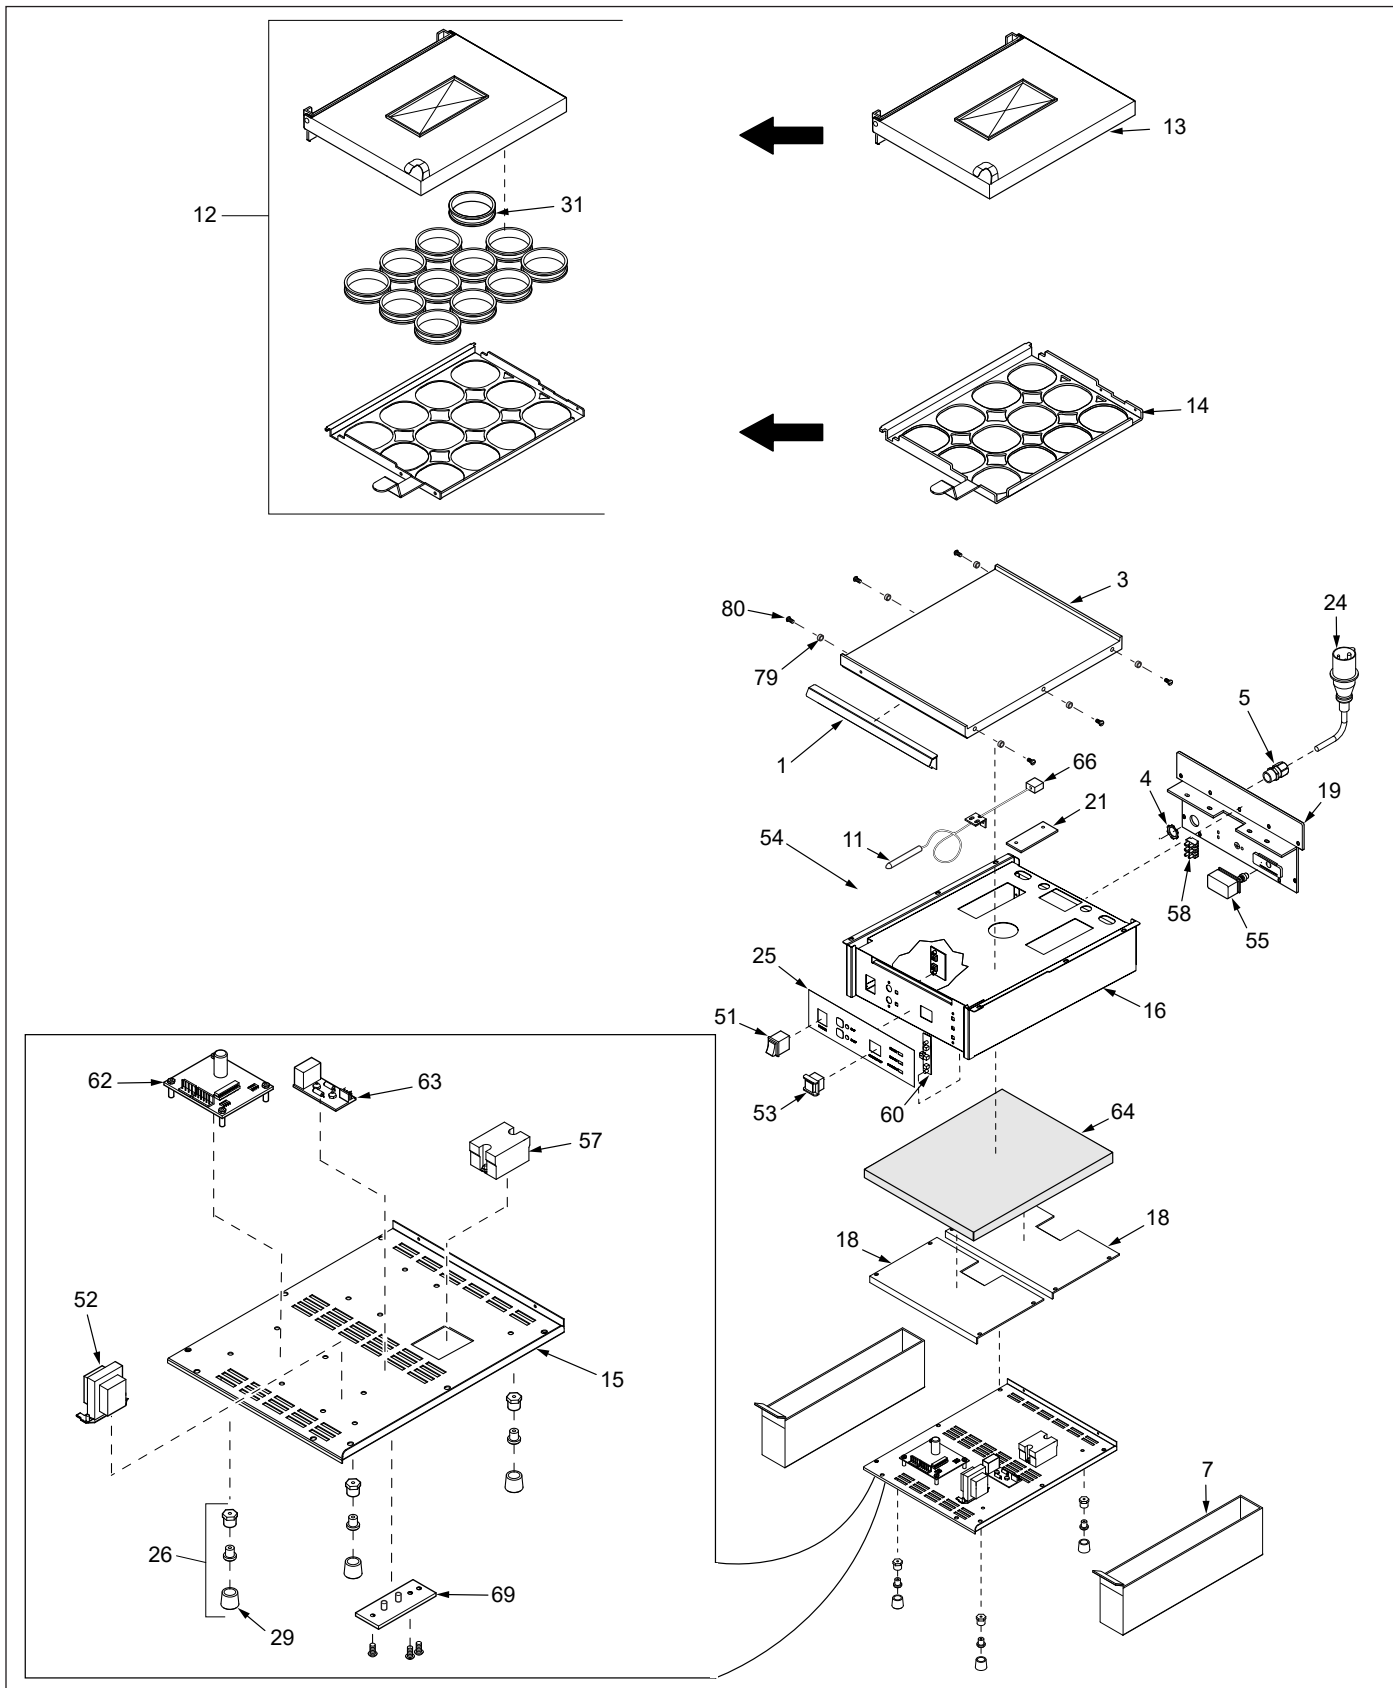

MANUAL EGG COOKER/STEAMER

REPLACEMENT PARTS (continued)

Parts List

(See Exploded Views for more information)

NOTICE

Use only genuine Antunes replacement parts in this unit. Use of parts other than those supplied by the manufacturer will void the warranty.

Item No.	Part No.	Description	Qty.
1	0021760	Nose Piece Weldment	1
3	7001441	Grill Platen	1
4	040P138*	Lock-nut, Conduit - 1/2" NPT	1
5	0400315	Strain Relief - Cord Connector	1
7	2180259	Scrap Pan	2
11	0502900	Bracket, Sensor	1
12a	7000675	Cover, Rack, & Ring Assembly (Incl. all shown)	1
12b	7001187	Cover, Rack, & Ring Assembly (Incl. all shown) (Mfg. No. 9300603 only)	1
13a	7000676	Cover, 12 Egg	1
13b	7001186	Cover, 6 Egg (Mfg. No. 9300603 only)	
14a	7000677	Rack, 12 Egg Ring	1
14b	7001185	6-Ring Egg Rack Repl Kit (Mfg. No. 9300603 only)	1
15	0012671	Panel, Base	1
16	0021758	Housing, Main	1
18	0504075	Cover, Insulation	2
19	0021759	Rear Panel Weldment	1
21	0504078	Bracket, Hi-Limit	1
24	0700724	Power Cord 20 A w/ Pin & Sleeve (Mfg. No. 9300602)	1
	0700552	Power Cord L6-20P Straight Twist Lock (Mfg. No. 9300600 & 9300603)	1
	0701078	Power Cord PSE, 20Amp, 250 VAC (Mfg. No. 9300618)	1
25	1002691	Label, Control	1
26	210K122	Adj. Leg Kit (4 Pack)	1
29	210K108	Rubber Tip Kit (4 Pack)	1
31	7001585	Egg Ring Kit (Pack of 1)	1
	7001586	Egg Ring Kit (Pack of 6)	1
	7001587	Egg Ring Kit (Pack of 12)	1
33	300P102*	Nut, Speed #8-32 "U"	1
37	306P113*	Screw, Mach. #6-32 x 5/8" Sltrshd	2
38	306P123*	Screw, Mach. #6-32 x 7/8" Sltrshd	4
39	306P130*	Nut, Hex KEPS #6-32	6

Item No.	Part No.	Description	Qty.
40	308P102*	Washer, Int. Tooth #8	1
41	308P104*	Scr, Mach #8-32 x 3/8" Sltrshd	1
42	308P143*	Nut, Hex KEPS #8-32	1
43	308P157*	Screw, Tap #8-32 x 3/8"	1
44	310P102*	Washer, Int Tooth-lock #10	2
45	310P109*	Scr, Mach #10-32 x 3/8" Sltrshd	1
46	310P136*	Scr, Mach. #10-32 x 1 and 1/4" Slpanhd	1
47	310P149*	Scr, Mach. #10-32 x 7/8" Slpanhd	1
48	325P101	Stud 1/4-20 x 1-1/2"	1
49	325P104*	Washer, Flat 1/4" S/S	1
50	325P109*	Scr, Hxcap 1/4-20 x 3/4"	1
51	4010245	Switch, Rocker (25A-250V)	1
52	4010187	Transformer, Stepdown (240V/12)	1
53	4010190	Switch, Momentary	1
54	4010242	PC-Board, Switch-Two Button	1
55	7000272	Thermostat, Hi-Limit	1
57	7000370	Solid State Relay	1
58	7001478	Terminal Block, 3-Pole	1
59	4070174	Egg Station LED Board	1
60	7000833	Control Board	1
62	7000833		
63	7001077	A/C Line Isolator Board	1
64	0400337	Insulation	1
66	4050214	Thermocouple	1
67	2180111	Plastic Dispensing Bottle (not shown)	1
69	0012679	Heat Sink Assembly	1
70	0700670	Wire Set, Main (not shown)	1
71	0700806	Wire Harness/PCB-LEDs (not shown)	1
72	0700656	Wire Harness/PCB-Isolator BD (not shown)	1
73	0700657	Wire Harness/PCB-2 Button Bd (not shown)	1
75	306P124*	Screw Mach #6-32 x 5/16" Sltrshd.	1
76	306P152*	Nut, Acorn #6-32 Low Crown w/ centerlock	1
80	325P132*	Screw, Mach 1/4-20 x 1/2"	6

* Available only packages of 10.

LIMITED WARRANTY

Antunes provides the following limited warranty to the original purchaser of all McDonald's Equipment.

All components are warranted against defects in the material and workmanship for a period of two (2) years. If any part becomes inoperable during the period of this warranty, Antunes will pay labor costs to an Authorized Service Agent to replace the part plus travel expenses.

WARRANTY EXCLUSIONS

- The cost of installation.
- Equipment that has been damaged due to shipment. Purchaser should make damage claim directly upon carrier.
- Alteration, misuse, abuse.
- Improper storage or handling.
- Improper maintenance.
- Failure to follow proper installation instructions, including electrical connection.
- Improper or unauthorized repairs.
- Scheduled Maintenance procedures as outlined in your MRC Card.
- Consumables such as Grill Covers (Release Sheets), gaskets, Conveyor Belt Wraps, O-rings, removal of links, and light bulbs.
- Freight, foreign, excise, municipal, or other sales or use taxes.
- Consequential damages such as loss of profit, loss of time, the cost of repairing or replacing other property which is damaged, or any other incidental damage of any kind.

Antunes reserves the right to make changes in design or add improvements on any products. The right is always reserved to modify Equipment because of factors beyond our control and government regulation. Changes to Equipment do not constitute a warranty charge.

This warranty is exclusive and is in lieu of all other warranties, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, each of which is expressly disclaimed. The remedies described above are exclusive, and in no event shall Antunes or any of its divisions be liable for special consequential or incidental damages for the breach or delay in the performance of this warranty.



Corporate Headquarters
Carol Stream, IL, USA
Phone: +1.630.784.1000
Toll Free: +1.800.253.2991
Fax: +1.(630).784-1650

China Facility
Suzhou, China
Phone: +84.512.6841.3637
Fax: +86.512.6841.3907

India Facility
Chennai, India
Phone: +91.44.25532212
Fax: +91.44.25532415